


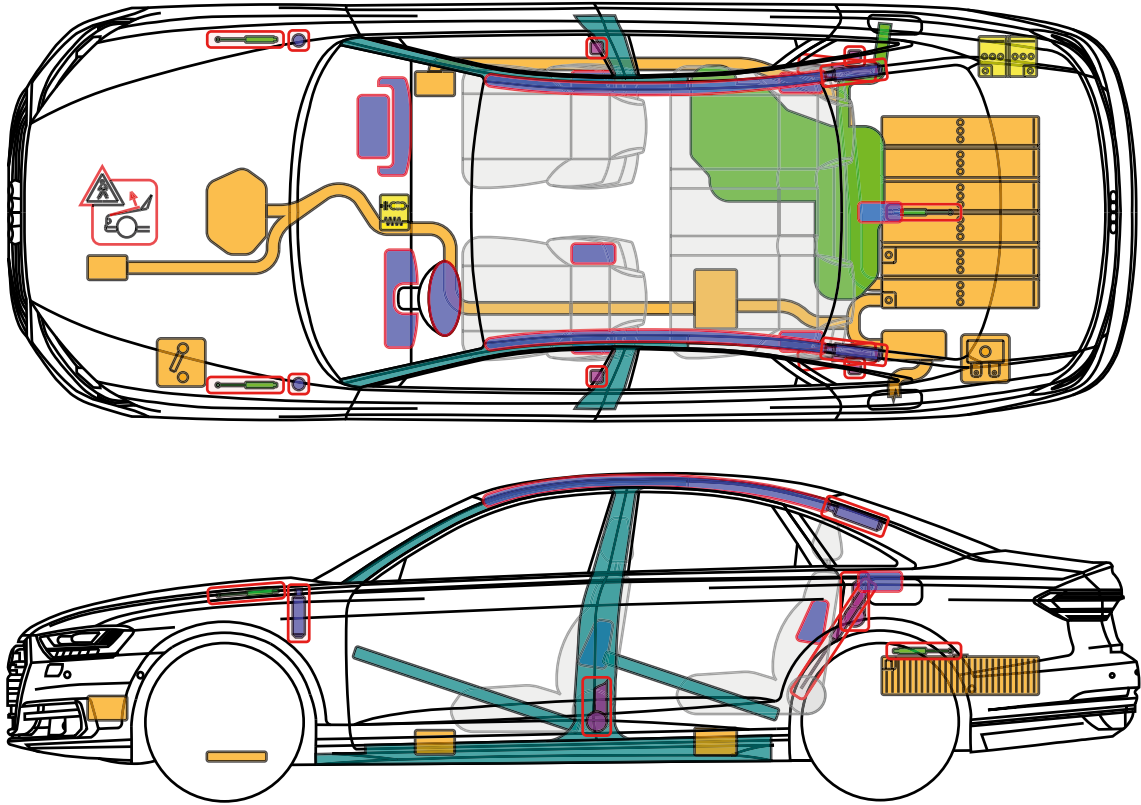















▶ Audi A8 TFSI e

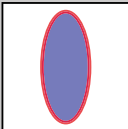from 2019

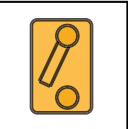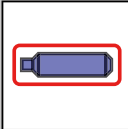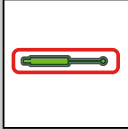

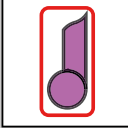Legende

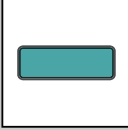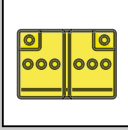	Airbag		Automatic roll bar		Fuel tank		High voltage emergency disconnect
	Stored gas inflator		Cylinder		High voltage battery		Pedestrian protection system
	Seatbelt pretensioner		SRS control unit		High voltage cable/component		
	Reinforcement		12 V Battery		Fusebox		

This document is a subject to the copyright of AUDI AG, Ingolstadt. Any duplication, distribution, storage, communication, broadcast and reproduction or transmission of the contents without written approval from AUDI AG is prohibited.





▶ Audi A8 TFSI e

from 2019


Characteristic features

The A8 TFSI e may be identified by the display of of the instrument cluster (power meter), the charging socket and the “e” in the model lettering. The model lettering at the rear can optionally be deselected.



Vehicle immobilization

1. Push “P”-Button on gear lever
2. Apply parking brake

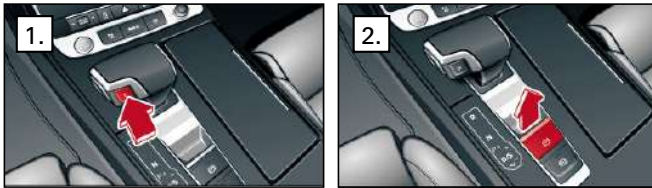


Switch off ignition

Press START-ENGINE-STOP button **without** depressing brake pedal



Warning: When pressing the START-ENGINE-STOP button and depressing the brake pedal at the same time, the engine will start!

The electric motor is silent.
The display on the left of the instrument cluster (power metre) indicates if the drive system is switched off („OFF“) or ready to drive („READY“).

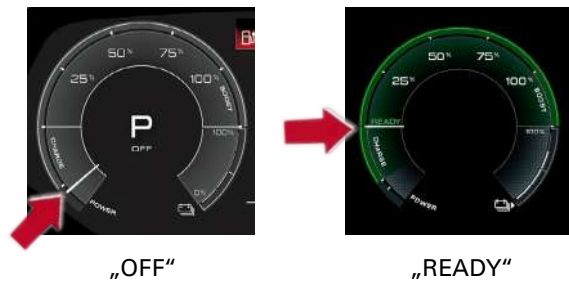

A8 TFSI e





▶ Audi A8 TFSI e

from 2019




Deactivation of High Voltage System

⚠ The High Voltage System is automatically deactivated during accidents in which the airbag(s) deployed.

For all other cases, deactivate the High Voltage System as follows


Alternative 1 – Emergency disconnect in the vehicle front end, open the front bonnet

1. Locate the emergency disconnect → on the left side next to the strut tower
2. Pull out red flap from emergency disconnect
3. Pull out black plug while pressing the red tab

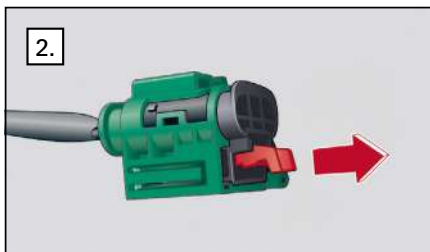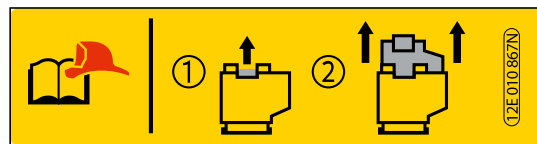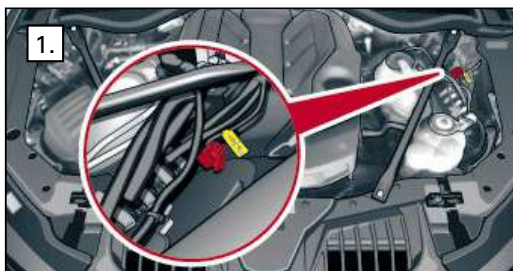

Alternative 2 - Emergency disconnect fuse in trunk

1. Remove cover at the left side in the trunk
2. Identify emergency fuse disconnection tab and pull out the tab

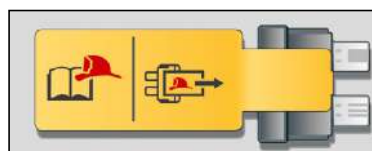

A8 TFSI e





▶ Audi A8 TFSI e

from 2019

Disconnect 12 V battery

The 12 V battery is located behind the right cover in the trunk.

1. Remove the right cover in the trunk
2. Separate the minus pole



Disconnect charging cable

Vehicle connected to charging station:

1. Unlock vehicle via remote control
2. Push button charging socket and disconnect the charging connector



Releasing the charging connector manually in case of failure:

1. Remove cover at the left side in the trunk
2. Release the yellow ring from its holder and pull the ring carefully
3. Disconnect the charging connector



If needed, refer to additional steps in this rescue sheet

In the case of Water Immersion:

The High Voltage system is isolated from the chassis and is designed to NOT pose a shock and will NOT energize the surrounding water.