



Saturn VUE Green Line Hybrid Emergency Response Quick Reference*




Procedures for Disabling Electrical

Disabling 12 Volt Power


Perform ALL of the following 3 steps to disable the 12 volt electrical system. This includes power to the airbag system.

1. Turn the ignition key to the OFF position
OR if the ignition key is not accessible, remove the 30 amp ignition maxi fuse (green) located in an underhood fuse block
2. Disconnect or cut BOTH 12v negative (-) battery cables

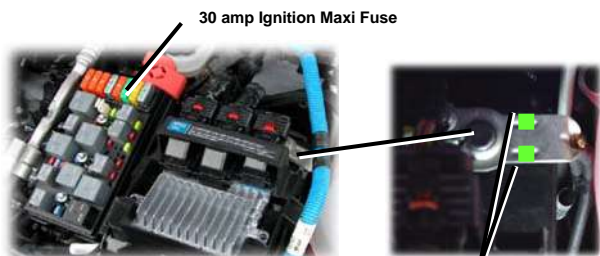

Cut here to disable BOTH 12v negative cables at the same time

3. Verify tachometer is pointing to OFF

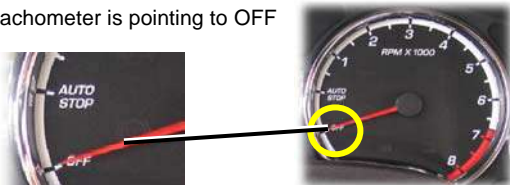

WAIT a minimum of 10 seconds to allow any undeployed airbag reserve energy to dissipate.

Note: Since one of the 12v negative (-) cables is partially hidden from view, it is best to disconnect the cables from the terminal or cut the cables near the terminal.

36 Volt Electrical System

First perform the "Disabling 12 Volt Power" procedure above. This also reduces the 36 volt current flow to an acceptably low level in the blue intermediate voltage (36v) cable. No further action is required.


Do NOT cut the blue intermediate voltage (36v) cable, because there is a higher arc potential.



CAUTION: Cutting the blue cable may result in an arc hazard.

Key Components and Cut Zones

Vehicle Identification

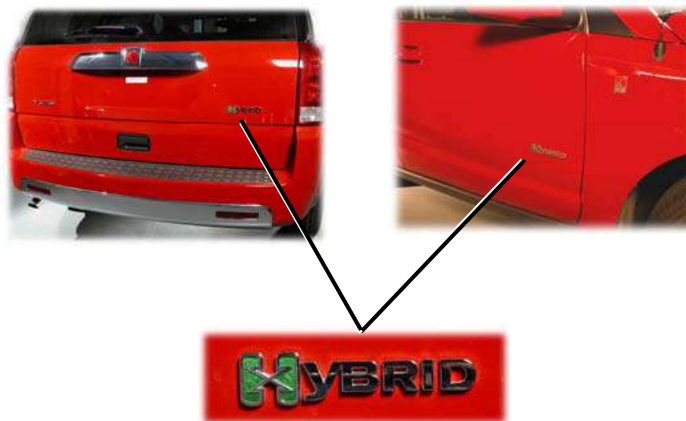

Cut Zones


DO NOT CUT HERE. Roof rails may contain side impact air bag inflator canisters



DO NOT CUT HERE. Channel beneath the vehicle contains intermediate 36v electrical wires

DO NOT CUT HERE. Hybrid Battery has 36v electrical potential at all times.

Key Hybrid Components

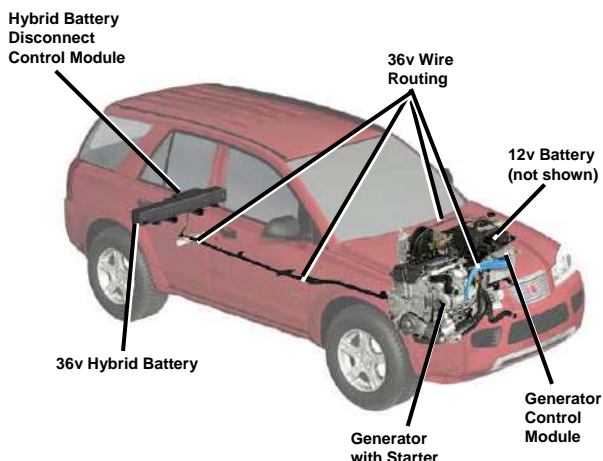

* For more information consult the 2007 Saturn VUE Green Line Hybrid Emergency Response Guide at www.gmstc.com